

SERVICE PARTS LIST

THE AUSTIN-HEALEY SPRITE

Item No.	DESCRIPTION	Commencing (C) 501		Qty. per Veh.	MODIFICATIONS		REMARKS
		Part Number	Illus. No.		New Part Number	Change Point	
	FRONT BUMPER (Optional Extra)						
1	Bumper assembly—front	N.S.P.		1			
2	Bar—spring	27H9607	28	1			
3	Spring—inner (R.H.)	27H9608	29	1			
4	Spring—inner (L.H.)	27H9609	30	1			
5	Spring—outer (R.H.)	27H9610	31	1			
6	Spring—outer (L.H.)	27H9611	32	1			
7	Over-rider assembly	27H9612	33	2			
8	Bolt—over-rider to bar	185373	34	2			
9	Washer for bolt (plain)	PWZ106	35	2			
10	Washer for bolt (spring)	LWZ206	36	2			
11	Nut for bolt	FNZ106	37	2			
12	Bolt—spring to bar	1G9872	38	2			
13	Washer for bolt (plain)	PWZ106	39	2			Part No. change. Was 7H9740
14	Washer for bolt (spring)	LWZ206	40	2			
15	Nut for bolt	FNZ106	41	2			
16	Moulding (plastic)	27H9613	42	4			
17	Bolt—bumper to body	HBZ0613	43	4			
18	Washer for bolt (plain)	PWZ106	44	4			
19	Washer for bolt (spring)	LWZ206	45	4			
	NUMBER-PLATE AND SUPPORT						
20	Plate—number (front) (Except N. America)	ADG474	46	1			
21	Screw—number-plate fixing	PMZ0412	47	2			
22	Washer (packing)	AHH5712	48	6			
23	Washer for screw (spring)	LWZ204	49	2			
24	Nut for screw	FNZ104	50	2			
25	Support—number-plate (N. AMERICA)	AHA5211	51	1			For use when front bumper is fitted
26	Screw—support fixing	PMZ0410	52	2			
27	Washer for screw (spring)	LWZ204	53	2			
28	Nut for screw	FNZ104	54	2			
		LHD					

