



A0391

Item No.	DESCRIPTION	Commencing (C) 501		Qty. per Veh.	MODIFICATIONS		REMARKS
		Part Number	Illus. No.		New Part Number	Change Point	
SHOCK ABSORBERS							
1	Absorber—shock—front (R.H.)] See Section K
2	Absorber—shock—front (L.H.)						
3	Absorber assembly—rear (R.H.)	2A7298		1	AHA5913] Com. (C) 4333 except 4471, 4622, 4680, 4684	
4	Absorber assembly—rear (L.H.)	2A7299	1	1	AHA5811		
5	Link—shock absorber	2A7303		2	AHA5313		
6	Rubber for shock absorber link (top)	9711222		2			
7	Screw—absorber body to frame	HZS0609	2	4] Fin. (C) 4332 except 4471, 4622, 4680, 4684	
8	Washer for screw (spring)	LWZ806	3	4			
9	Nut for screw	FNZ106	4	4			
10	Bolt—absorber to bracket (8 1/2" [9-52 cm.])			2	HBZ0680] Com. (C) 4332 except 4471, 4622, 4680, 4684	
11	Bolt—absorber to bracket (1 1/2" [3-81 cm.])			2	HBZ0612		
12	Nut for bolt			4	LNZ106		
13	Washer for nut (plain)			4	PWZ106		
14	Washer for nut (spring)			4	LWZ806		
15	Nut—absorber link to axle bracket	FNZ107	5	2			
16	Washer for nut (spring)	LWZ807	6	2			
17	Link—top	2A7310	7	2			
18	Bush—rubber	2A7278	8	4			
19	Distance piece—bush—top link	AHA5224	9	4			
20	Pin—top link to axle bracket	2A7279	10	2			
21	Washer for pin (spring)	LWZ807	11	2			
22	Nut for pin	FNZ107	12	2			
23	Bracket—mounting—link (R.H.)	2A7814		1] Fin. (C) 4332 except 4471, 4622, 4680, 4684	
24	Bracket—mounting—link (L.H.)	2A7815	13	1			
25	Bracket—mounting—link and absorber (R.H.)			1	AHA5905] Com. (C) 4332 except 4471, 4622, 4680, 4684	
26	Bracket—mounting—link and absorber (L.H.)			1	AHA5905		
27	Bolt—top link to mounting bracket	HBZ0732	14	2			
28	Washer for bracket bolt (plain)	PWZ107	15	2			
29	Washer for bracket bolt (spring)	LWZ807	16	2			
30	Nut for bolt	FNZ107	17	2			
31	Screw—mounting bracket to rear cross-member	HZS0610	18	6			
32	Washer for bracket screw (spring)	LWZ806	19	6			
33	Check strap—axle	AHH5981	20	2			
34	Distance tube—strap	2A7306	21	2			
35	Bolt—strap to floor bracket	HBZ0618	22	2			
36	Nut for bolt	LNZ206	23	2			
37	Washer—strap to axle spindle (plain)	PWZ206	24	2			
38	Washer—strap to axle spindle (spring)	LWZ206	25	2			
39	Nut—strap to axle spindle	FNZ106	26	2			