

ILLUSTRATION TO FOLLOW  
IN DUE COURSE

**SERVICE PARTS LIST**

**THE M.G. MIDGET**

Item No.	DESCRIPTION	Commencing (E) 9CG-U-H101		Qty. per Veh.	Type of Vehicle	MODIFICATIONS			REMARKS
		Part Number	Illus. No.			New Part Number	Change Point	Amdt. No.	
	<b>IGNITION EQUIPMENT</b>								
	<b>DISTRIBUTOR</b>								
1	Distributor	AEJ48		1					
2	Plate assembly—clamping	3H2138		1					
3	Screw—clamping plate to distributor housing	6K689		2					
4	Pipe—vacuum ignition control	AEA579		1					
5	Clip—pipe to inlet manifold	AEH581		1					
6	Clip—pipe to cylinder head	ACH9009		1					
7	Connection—pipe to carburetter (rubber)	ACH9041		1					
	<b>H.T. CABLES</b>								
8	Cable—H.T.	45223		A/R					Only available in multiples of feet
9	Cable—H.T.—coil to distributor (9½" [24-44 cm.])			1					
10	Cable—H.T.—No. 1 (12" [30-48 cm.])			1					
11	Cable—H.T.—No. 2 (11" [27-94 cm.])			1					
12	Cable—H.T.—No. 3 (8½" [21-59 cm.])			1					
13	Cable—H.T.—No. 4 (9½" [24-44 cm.])			1					
14	Sleeve—cable identity—No. 1	2H4243		1					
15	Sleeve—cable identity—No. 2	2H4244		1					
16	Sleeve—cable identity—No. 3	2H4245		1					
17	Sleeve—cable identity—No. 4	2H4246		1					

**SERVICE PARTS LIST**

**THE M.G. MIDGET**

Item No.	DESCRIPTION	Commencing (E) 9CG-U-H101		Qty. per Veh.	Type of Vehicle	MODIFICATIONS			REMARKS
		Part Number	Illus. No.			New Part Number	Change Point	Amdt. No.	
	<b>IGNITION COIL</b>								
1	Coil—ignition	BMK358		1					
2	Nut—H.T. terminal	3H2695		1					
3	Washer for nut (spring)	3H2696		1					
4	Screw—coil to bracket and gusset plate assembly	HZS0405		2					
5	Washer for screw (plain)	PWZ204		2					
6	Washer for screw (spring)	LWZ204		2					
7	Nut for screw	FNZ104		2					
	<b>SPARKING PLUGS</b>								
8	Plug—sparking	3H2006		4					
9	Plug—sparking	2A875		4					For use when short-wave radio is fitted
10	Suppressor—sparking plug	(RHD) 3H1422		4					
11	Connector—sparking plug	18H184		4					

ILLUSTRATION TO FOLLOW  
IN DUE COURSE