

Index to Sections and Illustrations

<i>Group</i>	<i>Pages</i>	<i>Plate</i>	<i>Group</i>	<i>Pages</i>	<i>Plate</i>
Block assembly and front engine mounting plate	A.1-A.2	A	Front axle—suspension and brakes	K.1-K.4	K, KA
Connecting rods—bearings—crankshaft and gear—camshaft— crankshaft pulley—flywheel—tappets and push-rods— distributor housing and driving spindle	A.3-A.4	AA	Rear shock absorbers	L.1	L
Cylinder head — valves — guides — springs — rockers — valve rocker cover—oil filler—water outlet elbow and thermostat	A.5-A.6	AB	Brake controls	M.1-M.2	M
Rear engine mounting plate—cylinder front and side covers and drain tap	A.7	AC	Brake and clutch pipes	M.3	MA
Sump—dipper rod—oil pump—strainer and release valve ..	A.8-A.9	AD	Hand brake lever and linkage	M.4	MB
Oil filter	A.10	AE	Battery and dynamo	N.1	N
Water pump—fan pulley—dynamo mounting fan and fan belt	A.11-A.12	AF	Starter	N.2	NA
Inlet and exhaust manifold and engine mountings	A.14-A.15	AG	Switches	N.3	NB
Exhaust system	A.16	AH	Lamps (road)	N.4-N.6	NC
Engine controls	A.17	AJ	Flasher unit and horns	N.7	ND
Distributor—H.T. cable—ignition coil and sparking plugs ..	B.1-B.2	B	Windscreen wipers	N.8	NE
Radiator	C.1	C	Cables and connections	N.9-N.10	NF
Fuel tank and fuel pipes	D.1	D	Fascia panel and instruments	O.1-O.3	O
Fuel pump	D.2	DA	Wheels	P.1	P
Carburettors	D.4-D.5	DB	Body shell	R.1-R.2	R
Air cleaner	D.6	DC	Bonnet	R.3-R.4	RA
Clutch—clutch pedal and linkage and clutch slave cylinder ..	E.1-E.2	E	Wings	R.5	RB
Gearbox	F.1-F.3	F	Boot lid	R.6	RC
Gearbox controls	F.4-F.5	FA	Doors—hinges and locks	R.7	RD
Propeller shaft	G.1	G	Sliding sidescreens	R.8	RE
Rear axle	H.1-H.2	H	Windscreen and windscreen washer	R.9	RF
Rear brakes and rear spring	H.3-H.4	HA	Hood and tonneau cover	R.10-R.11	RG
Steering	J.1-J.3	J	Hard top	R.12	RH
			Bumpers and number-plates	R.13-R.14	RJ
			Trim and trim finishers	R.15-R.20	RK
			Seats and fittings	R.22-R.23	RL
			Heater and ventilating equipment	R.24-R.26	RM
			Sundries	R.27	RN

Alphabetical Index

A		
	Page	
Absorber—shock—front	K.4	
Absorber—shock—rear	L.1	
Adaptor—oil filter	A.10	
Adjuster—front brake-shoe	K.3	
Adjuster—rear brake-shoe	H.3	
Arm—windscreen wiper	N.8	
Armature—dynamo	N.1	
Armature—starter	N.2	
Axle—rear	H.1	
Axle—swivel	K.1	
B		
Badge—'M.G.'—fascia panel	O.1	
Bag—hood cover stowage	R.10	
Bag—hood frame stowage	R.10	
Battery	N.1	
Bearing—clutch release	E.1	
Bearing—connecting rod	A.3	
Bearing—front hub	K.2	
Bearing—gearbox	F.1, F.2	
Bearing—main	A.3	
Bearing—needle—propeller shaft	G.1	
Bearing—rear axle pinion	H.2	
Bearing—rear hub	H.2	
Bearing—steering pinion	J.1	
Belt—fan	A.12	
Blade—fan	A.12	
Blade—windscreen wiper	N.8	
Block—cylinder	A.1	
Blower—heater	R.25	
Body shell	R.1	
Bonnet	R.3	
Boot—master cylinder push-rod	M.1	
Boot—rear wheel cylinder	H.3	
Boot—steering ball socket	J.2	
Box—control	N.3	
Box—pedal	M.2	
Bracket—dynamo mounting	A.12	
Bracket—engine mounting	A.15	
Bracket—exhaust mounting	A.16	
Bracket—hand brake mounting	M.4	
Bracket—radiator mounting	C.1	
Bracket—steering-column mounting	J.3	
Bracket—steering rack mounting	J.2	

B		
	Page	
Brake—front	K.3	
Brake—rear	H.3	
Bulb holder—instrument	N.9, N.10	
Bulb—instrument	N.9, N.10	
Bulb—lamp	N.4, N.5	
Bulb material—trim	R.21	
Bumper—rubber—rear axle	H.1	
Bumpers—front and rear	R.13	
C		
Cable—accelerator control	A.18	
Cable—bonnet release	R.3	
Cable—choke control	A.18	
Cable—hand brake	M.4	
Cable—harness	N.9, N.10	
Cable—H.T.	B.1	
Cable—speedometer	O.2	
Cable—starter control	N.3	
Cable—tachometer	O.3	
Cage—differential	H.1	
Camshaft	A.4	
Cap—fuel filler	D.1	
Cap—master cylinder filler	M.1	
Cap—oil filler tube	A.6	
Cap—radiator filler	C.1	
Cap—wheel	P.1	
Carburettors	D.4	
Carpet—bulk	R.21	
Carpet—rear	R.19	
Carrier—differential	H.1	
Case—axle	H.1	
Case—gearbox	F.1	
Case—sidescreen stowage	R.8	
Casing—gearbox remote control	F.4	
Casing—outer—windscreen wiper	N.8	
Catch—bonnet safety	R.4	
Clamp—exhaust pipe to manifold	A.16	
Clamp—spare wheel	P.1	
Cleaner—air	D.6	
Clutch	E.1	
Coil—ignition	B.2	
Column—steering	J.2	
Connecting rod and cap	A.3	
Connections—brake and clutch pipe	M.3	

C		
	Page	
Control—push-pull—fresh-air unit	R.26	
Control—windscreen washer	R.9	
Cooling system	C.1	
Cover—clutch	E.1	
Cover—engine front	A.7	
Cover—engine side—front	A.7	
Cover—engine side—rear	A.7	
Cover—gearbox front	F.1	
Cover—gearbox side	F.1	
Cover—hood	R.10	
Cover—seat cushion	R.22	
Cover—seat squab	R.22	
Cover—starter pinion	F.3	
Cover—tonneau	R.11	
Cover—valve rocker	A.6	
Crankshaft	A.3	
Cross-head and rack—windscreen wiper	N.8	
Cross-rod—hand brake	M.4	
Crown wheel and pinion	H.1	
Cushion—rear compartment	R.23	
Cushion—seat	R.22	
Cylinder—clutch slave	E.2	
Cylinder—front wheel	K.3	
Cylinder head	A.5	
Cylinder master	M.1	
Cylinder—rear wheel	H.3	
D		
Diaphragm—fuel pump	D.2	
Differential assembly	H.1	
Disc—wheel	P.1	
Distributor	B.1	
Door—heater outlet	R.25	
Doors	R.7	
Drum—front brake	K.3	
Drum—rear brake	H.3	
Dynamo	N.1	
E		
Elbow—demister	R.25	
Elbow—water outlet	A.6	
Electrical equipment	N.1	
Element—oil filter	A.10	
Engine unit.. .. .	A.1	

Alphabetical Index—continued

	<i>Page</i>
Excluder—draught—door	R.17
Excluder—draught—pedal box	M.2
Exhaust system	A.16
Extension—gearbox	F.4
Extension—silencer tail pipe	A.17

F

Fan—dynamo	A.12
Fascia panel	O.1
Filter—oil	A.10
Finisher—cockpit rear	R.20
Finisher—door top	R.20
Finisher—radiator grille surround	C.1
Flange—propeller shaft yoke	G.1
Flange—universal joint—rear axle	H.2
Flasher unit	N.7
Flash—'Midget'	R.6
Flywheel	A.4
Forks—gear striking	F.3
Frame—hood	R.10
Frame—seat base	R.23
Fresh-air unit	R.26
Front axle and suspension	K.1
Front end assembly	R.1
Fuse	N.3
Fusebox	N.3

G

Gauge—fuel	O.1
Gauge—oil pressure and radiator thermometer	O.2
Gauge unit—fuel tank	D.1
Gearbox	F.1
Gear—camshaft	A.4
Gear—crankshaft	A.3
Gear—2nd speed	F.2
Gear—speedometer	F.3
Gear—3rd speed	F.2
Glass—mirror	R.27
Glass—windscreen	R.9
Grille—radiator	C.1
Guide—valve	A.5

H

	<i>Page</i>
Hand brake	M.4
Handle—boot lid	R.6
Hard top	R.12
Headlamp	N.4
Heater	R.24
Hinge—bonnet	R.3
Hinge—boot lid	R.6
Hinge—door	R.7
Holder—licence	R.27
Hood	R.10
Horn	N.7
Horn—push	N.7
Hose—brake	M.3
Hose—fresh-air unit	R.26
Hose—heater	R.24, R.25
Hose—radiator	C.1
Housing—distributor	A.4
Hub—front	K.2
Hub—rear	H.2

I

Ignition—equipment	B.1
Instruments	O.1

J

Jet—windscreen washer	R.9
Joint set—engine decarbonizing	A.13
Joint set—engine supplementary	A.13
Journal and needle kit—propeller shaft	G.1

K

Key—boot lid lock	R.3
Key—camshaft gear	A.4
Key—crankshaft gear	A.3
Key—ignition	N.3
Kit—clutch slave cylinder repair	E.2
Kit—engine service	A.13
Kit—front wheel cylinder repair	K.3
Kit—fuel pump repair	D.3
Kit—master cylinder repair	M.1
Kit—rear wheel cylinder repair	H.3
Kit—swivel pin and bush repair	K.4
Kit—water pump repair	A.11
Knob—change speed lever	F.4

Page

Knob—fresh-air unit control	R.26
Knob—heater switch	R.24
Knob—horn—push	N.7
Knob—windscreen washer control	R.9

L

Lamp—number-plate	N.6
Lamp—side and flasher	N.5
Lamp—stop/tail/flasher and reflex	N.5
Lamps—road	N.4
Laygear	F.1
Layshaft	F.1
Leathercloth—bulk	R.21
Leaves—road spring	H.4
Lever—accelerator pedal	A.17
Lever—balance—hand brake	M.4
Lever—change speed	F.4
Lever—clutch withdrawal	F.3
Lever—gearbox front and rear selector	F.5
Lever—hand brake—wheel cylinder	H.3
Lever—steering	K.1
Lid—boot	R.6
Lighter—cigar	R.27
Liner—cylinder block	A.12
Liners—trim	R.15, R.16
Lining—clutch	E.1
Lining—front brake	K.3
Lining—rear brake	H.3
Link—accelerator pedal	A.17
Link—dynamo adjusting	A.12
Link—lower—front suspension	K.1
Link—rear shock absorber	L.1
Link—top—rear shock absorber	L.1
Lock—bonnet	R.4
Lock—boot	R.6
Lock—door	R.7
Lock—ignition switch	N.3

M

Manifold—exhaust	A.14
Manifold—inlet	A.14
Mats—floor	R.17, R.18, R.19
Mirror—interior	R.27
Mirror—wing	R.27

Alphabetical Index—continued

	<i>Page</i>		<i>Page</i>		<i>Page</i>
Motif—'Midget'—boot lid	R.6	Pipe—vacuum ignition control	B.1	Rod—dipper	A.8
Motor—windscreen wiper	N.8	Pipe with oil strainer bracket—suction ..	A.9	Rubber—tie—engine mounting	A.15
Moulding—bonnet centre	R.3	Piston—clutch slave cylinder	E.2	Runners—seat	R.23
Moulding—door	R.7	Piston—engine	A.1		
Moulding—shroud	R.2	Piston—master cylinder	M.1	S	
Moulding—wing	R.5	Plate—clutch driven	E.1	Seal—oil—engine front cover	A.7
Mounting—dynamo	A.12	Plate—clutch pressure	E.1	Seal—oil—front hub	K.2
Mounting—engine	A.15	Plate—cover—heater tap hole in cylinder		Seal—oil—gearbox rear extension ..	F.4
Mounting—exhaust pipe	A.16	head	A.6	Seal—oil—rear axle pinion	H.2
Mounting—windscreen washer jet ..	R.9	Plate—engine mounting—front	A.2	Seal—oil—rear hub	H.2
		Plate—engine mounting—rear	A.7	Seal—oil—speedometer pinion	F.4
N		Plate—fascia blanking	O.1	Seat—coil spring	K.4
Nozzle—demister	R.25	Plate—front brake	K.3	Seats	R.22
Number-plates	R.14	Plate—rear brake	H.3	Shaft—axle	H.2
Nut—wheel stud	H.2, K.2	Plate—rear engine mounting support ..	A.15	Shaft—gearbox 1st motion	F.1
		Platform heater	R.2	Shaft—gearbox remote control	F.5
		Plinth—number-plate lamp	N.6	Shaft—gearbox reverse	F.3
		Plugs—blanking	R.27	Shaft—gearbox 3rd motion	F.2
Over-riders	R.13	Plug—sparking	B.2	Shaft—gear control	F.4
		Pocket—door	R.16	Shaft—propeller	G.1
O		Propeller shaft	G.1	Shaft—valve rocker	A.5
		Pulley—crankshaft	A.4	Shield—heat	D.5
P		Pulley—dynamo	A.12	Shock absorbers—front	K.4
Pad—brake pedal	M.1	Pulley—fan and water pump	A.11	Shock absorbers—rear	L.1
Pad—clutch pedal	E.1	Pump—fuel	D.2	Shoe—front brake	K.3
Paint	T.1	Pump—oil	A.9	Shoe—rear brake	H.3
Panel—fascia	O.1	Pump—water	A.11	Sidescreeen—sliding	R.8
Panels—body	R.1, R.2	Push-rod—clutch slave cylinder	E.2	Silencer—exhaust	A.16
Pedal—accelerator	A.17	Push-rod—master cylinder	M.2	Sleeve—blanking—thermostat by-pass ..	A.12
Pedal—brake	M.1	Push-rod—tappet	A.4	Socket—steering ball	J.2
Pedal—clutch	E.1			Sparking plug	B.2
Pillar—dynamo adjusting link	A.12	R		Speedometer	O.2
Pin—gudgeon	A.2	Rack—steering	J.1	Spindle—distributor driving	A.4
Pin—swivel	K.1	Radiator	C.1	Spring—accelerator pedal return ..	A.17
Pinion and barrel—starter	N.2	Rail—tonneau cover support	R.11	Spring—brake pedal return	M.1
Pinion—differential	H.1	Ratio box—tachometer	O.3	Spring—clutch pedal return	E.1
Pinion—speedometer	F.4	Rear axle and suspension	H.1	Spring—coil	K.4
Pinion—steering	J.1	Ring—compression	A.1	Spring—road	H.4
Pipe—air cleaner to rocker cover ..	D.6	Ring—scraper	A.2	Spring—valve	A.5
Pipe—carburettor to carburettor ..	D.5	Ring—starter	A.4	Squab—seat	R.22
Pipe—crankcase vent	A.7	Rocker—valve	A.5	Starter	N.2
Pipe—exhaust	A.16	Rod—battery fixing	N.1	Steering	J.1
Pipe—fuel pump to carburettor	D.5	Rod—bonnet prop.	R.3	Strainer—oil	A.9
Pipe—oil filter to crankcase	A.10	Rod—boot lid prop	R.6	Strap—axle check	L.1
Pipe—oil gauge	O.2				
Pipes—brake and clutch	M.3				
Pipes—fuel	D.1				

Alphabetical Index—continued

	<i>Page</i>
Strap—door check	R.17
Striker—door lock	R.7
Sump—engine	A.8
Sump—oil filter	A.10
Sundries	R.27
Support—front and rear number-plates ..	R.14
Suppressor—sparking plug	B.2
Suspension—front	K.1
Switches—electrical	N.8
Switch—heater	R.24
Switch—stop light	N.8
Synchronizer—2nd speed	F.2
Synchronizer—3rd and 4th speed	F.2
T	
Tachometer	O.8
Tank—fuel	D.1
Tap—cylinder drain	A.7
Tap—radiator drain	C.1

	<i>Page</i>
Tap—water control—heater	R.24
Tappet—valve	A.4
Thermostat	A.6
Thrower—oil—crankshaft	A.8
Tie-rod—steering	J.1
Tools	S.1
Tray—battery	N.1
Trim roll—fascia	R.15
Trimming	R.15
Tube—steering-column—inner	J.8
U	
Underframe	R.2
Unit—fuel tank gauge	D.1
V	
Vacuum ignition control	B.1
Valve—exhaust	A.5

	<i>Page</i>
Valve—inlet	A.5
Valve—master	M.1
Valve—oil release	A.9
Vane—water pump	A.11
Ventilating equipment	R.26
W	
Washer—windscreen	R.9
Wheel arch—front	R.2
Wheelbox—windscreen wiper	N.8
Wheel—1st speed—gearbox	F.2
Wheel—reverse—gearbox	F.3
Wheel—road	P.1
Wheel—steering	J.8
Windscreen	R.9
Wing—front	R.5
Wing—rear	R.5
Wiper—windscreen	N.8